

Kestrel[®] 4000 Pocket Weather[™] Tracker[™]

Instruction Manual
NK

Kestrel[®] 4000 Pocket Weather[™] Tracker[™]

FRONT

MANUAL MEMORY BUTTON
Press to manually store current conditions to memory.


MEASUREMENT BUTTONS
Press to scroll between screens:
Date/Time, Measurements,
User Defined Screens

POWER/SETUP BUTTON
Hold to turn power on or off. Press
to enter and exit Main Setup Menu.

BACKLIGHT BUTTON
Press to activate
backlight
for 1 minute.

MODE BUTTONS
Press to change mode of
measurements: Current,
Min/Max/Avg, Chart.

COMMAND BUTTON
In Chart Screens, press
to view data points.
In Setup Menus, press
to make selection.

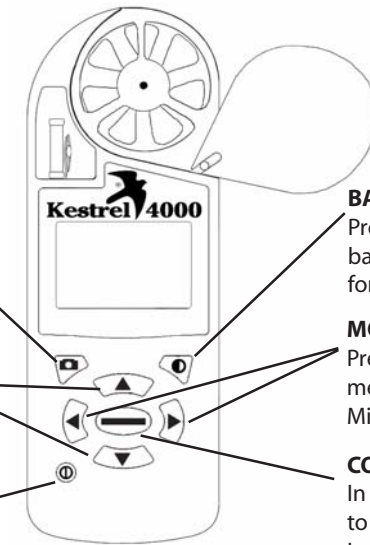

2

Kestrel[®] 4000 Pocket Weather[™] Tracker[™]

BACK

IMPELLER

Sapphire jewel bearings
on a user-replaceable
impeller.

IMPELLER COVER


Swivel cover protects
impeller when not in use.

DATA UPLOAD OPTICAL COUPLER

Software and serial port
interface sold separately.

BATTERY DOOR

Sealed with o-ring to keep
product watertight.

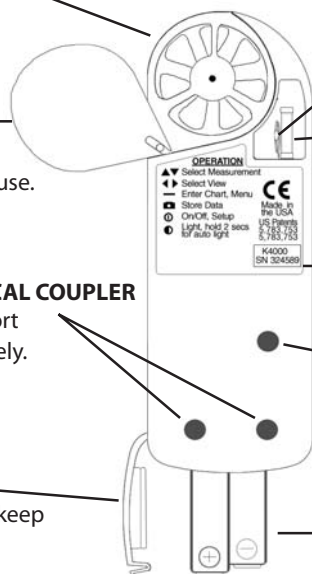

TEMPERATURE SENSOR
Hermetically sealed
precision thermistor.

HUMIDITY SENSOR
Capacitive sensor.

SERIAL NUMBER

PRESSURE SENSOR
Monolithic silicon
piezoresistive sensor.

2 AAA BATTERIES

3

Congratulations on the purchase of your Kestrel 4000 Pocket Weather Tracker! The Kestrel 4000 is the next generation of weather monitoring. Now, you can instantly measure EVERY major environmental condition easily, accurately, and right in the palm of your hand. While the Kestrel 4000 is user-friendly and simple to use, (and the Quick Start Card will help get you started) reading the instruction manual is recommended in order to use the Kestrel 4000 to its fullest potential.

NK, manufacturer of Kestrel Pocket Weather Meters, is available to answer questions and provide support. Contact NK by phone: 610.447.1555, fax: 610.447.1577, email: info@nkhome.com, or web: www.nkhome.com.

Table of Contents


Getting Started	
Pouch and Lanyards	5
Battery Installation	5
On/Off	5
Date and Time Set Up	5
Screen Navigation	
Measurements and Modes	6-7
Charts	7
Special Functions	
User Screens	8
Wind Speed/Chill Averaging	8
Baometer/Altimeter Adjustments	8
Manual Data Storage	9
Backlight	9
Main Setup Menu	9-11
Glossary	12-13
Factory Default Settings	14
Specifications	15

4

Getting Started

Pouch and Lanyards

A soft pouch and wrist and neck lanyards have been provided. To install the lanyard, feed the thin end of the lanyard around the metal post on the battery door (as shown in diagram). Feed the thick end of the lanyard through the loop on the thin end.

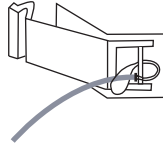

Battery Installation

Use only AAA batteries. Install batteries as indicated on the battery door. After installing the batteries, the Kestrel 4000 will automatically start in the Date and Time Setting mode. (See Date and Time Setup below.) Custom settings and chart data will be saved during a battery change.

Turning the Kestrel 4000 ON and OFF

ON: Press the **⏻** button.

OFF: Hold the **⏻** button for two seconds. Or, press the **⏻** button, then press the **⏏** button with the word OFF highlighted. (Note: your unit will continue to automatically store data when the power is turned off.)

Date and Time Setup

The first time that you turn on your Kestrel 4000, as well as after a battery change, you will need to set the date and time. The Introduction Screen will appear for 3 seconds, followed by the Date/Time Setup Screen. Press the **▲** and **▼** buttons to scroll through the settings. Press the **◀** and **▶** buttons to scroll through the setting options. After entering the date and time, press the **⏻** button to exit the Date/Time Setup. Then press the **⏻** button again to exit the Main Setup Menu.



Navigation

The Kestrel 4000 is set up to display 10 Measurements (some are actually calculations) in 3 Modes.

The Measurements are listed to the right with their corresponding screen icon. Using the **▲** and **▼** buttons will scroll through the various Measurements.


The Modes are:

Current - displays the instantaneous reading

Min/Max/Avg - displays the Minimum/Maximum/Average readings from stored data

Chart - displays a graphical representation of up to 250 stored data points.

Examples of each of these screens are shown below. Using the **◀** and **▶** buttons will scroll through the various Modes.

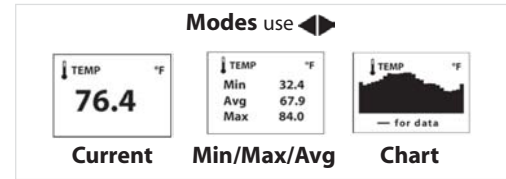


- Measurements**
use **▲▼**
- Wind Speed
 - Temperature
 - Wind Chill
 - Humidity
 - Heat Index
 - Dew Point
 - Wet Bulb
 - Barometric Pressure
 - Altitude
 - Density Altitude

In addition to these Measurements and Modes, there are also 3 User Screens, which simultaneously show 3 current measurements (see pages 8 and 10 for more information); and the Date & Time Screen, which gives the current date and time.

Measurement Navigation

 Starting on the Date & Time Screen...



...Press the **▼** button to scroll to the Current Wind Speed Screen.



 
Press the **▼** button again to scroll to the Current Temperature Screen.




Continue pressing the **▼** button to scroll through the Current Measurement Screens, listed on the previous page, followed by the 3 User Screens. Press the **▲** button to scroll through these screens in reverse order.

Mode Navigation

While in a Current Screen, press the **▶** button to view the Min/Max/Avg for a measurement. If there is no stored data, the values will be displayed as ---.



 
Press the **▶** button again to view a chart for the measurement. If there is no stored data, the axis will appear, but the chart will be blank.



Press the **◀** button to return to the Min/Max/Avg and Current Screens. From either Min/Max/Avg or Chart Screen, press the **▼** or **▲** button to scroll through the Min/Max/Avg or Chart Screen for the other measurements.

Navigation of Charts

 The Kestrel 4000 is capable of storing up to 250 data points. To review the data, press the **⏏** button while viewing a chart. A cursor will appear on the most recent data point. Press the **◀** button to scroll through older data points and the **▶** button to scroll through more recent data points. The date and time at which the data was stored will be displayed at the bottom of the screen. The data value will be displayed at the top of the screen. Hold down the **◀** or **▶** button to scroll quickly through the data points.




Press the **▲** or **▼** button to review the data for the other measurements. Please note that the cursor will remain at the same date and time. If new data is stored while viewing chart data, the entire chart will shift left with the new data point charted on the right. The cursor will not shift with the chart.

Press the **⏏** button to return to the Chart Mode.

Special Functions

User Screens

 The Kestrel 4000 has three User Screens which can be customized to display three current measurements simultaneously. (See page 10 for setup instructions.)



Min/Max/Avg for Wind Speed and Wind Chill

 
The Min/Max/Avg values for Wind Speed and Wind Chill are measured independently from the stored and charted data. While viewing the Min/Max/Avg screen for either Wind Speed or Wind Chill, press the **⏏** button to begin collecting data for both measurements. Press the **⏏** button again to stop collecting data and hold the values on the display. Press the **⏏** button a third time to clear the data. This routine will work simultaneously for both measurements, regardless of which one is displayed while the routine is run. The Min/Max/Avg for Wind Speed and Wind Chill will not affect any other Min/Max/Avg or stored data.

Barometric Pressure and Altitude Adjustment

The Kestrel 4000 will measure air pressure in order to calculate barometric pressure and altitude. Changes in either air pressure or altitude will affect these readings, so it's important to make adjustments as necessary.

Altitude Adjustment

Obtain a barometric pressure reading from a local weather source to use as your reference pressure. From the Current Altitude Screen, press the **⏏** button to enter the adjustment mode. Press the **▶** button to increase the reference pressure or the **◀** button to decrease the reference pressure. You will notice that the Altitude will change with changes in the reference pressure. Press the **⏏** button to exit the adjustment mode.



Pressure Adjustment

Obtain your altitude from a topographical map or landmark to use as your reference altitude. From the Current Barometric Pressure Screen, press the **⏏** button to enter the adjustment mode. Press the **▶** button to increase the reference altitude or the **◀** button to decrease the reference altitude. You will notice that the Barometric Pressure will change with changes in the reference altitude. Press the **⏏** button to exit the adjustment mode.



Manual Data Storage

To manually store data, press the **■** button. One of the following will appear: Data Stored (data has been captured and will appear on chart), Full (Overwrite is off and data log is full), or Off (Manual Store button has been disabled). See below for more information on Memory.

Backlight

Press the **Ⓚ** button to activate the backlight. The light will remain activated for one minute. Press the **Ⓚ** button within one minute to deactivate the light manually.

Main Setup Menu

You can customize your Kestrel 4000 in multiple ways. Press the **Ⓚ** button to access the Main Setup Menu. Press the **■** button to select the highlighted setting.

Off - Press the **Ⓚ** or the **■** button to turn the display off. Even when the Kestrel's display is turned off, the unit will continue to automatically store data at the defined Store Rate. Wind speed will NOT be stored when the unit is off. To continuously measure wind speed, turn the auto shutdown off (pg. 12) The battery life is decreased if data is stored frequently. The only way to completely shut off the unit is to remove the batteries. Custom settings and data will be stored when the batteries are removed.

Data Log - These settings control the data storage properties. Press the **Ⓚ** button to return to the Main Setup Menu.

Setting	Description	Operation
Auto Store (On/Off)	When On, data is automatically stored at preset Store Rate. When Off, data is only stored when manually captured with the ■ button.	Press ◀ or ▶ to toggle between On and Off.
Clear Log (Go/Done)	All stored data is cleared. This will also clear Min/Max/Avg data.	Press ◀ or ▶ to clear the log.
Reset MMA (Go/Done)	All Min/Max/Avg data is cleared. Chart data will remain intact.	Press ◀ or ▶ to clear the MMA.
Store Rate* (2 sec - 12 hr)	The frequency at which data sets are automatically stored. (Battery life may be shortened if data is stored frequently.)	Press ◀ or ▶ to increase or decrease Store Rate frequency.
Overwrite (On/Off)	This setting only applies when the data log is full. When On, oldest data point is discarded to allow memory for the new data point. When Off, new data points are not saved.	Press ◀ or ▶ to toggle between On and Off.
Man Store (On/Off)	When On, data is stored when the ■ button is pressed. When off, the ■ button is disabled.	Press ◀ or ▶ to toggle between On and Off.

* When unit is off, data is NOT stored for 2 sec and 5 sec Store Rates.

9

System - The display Contrast and Auto Shutdown can be reconfigured as required. Press the **▲** and **▼** buttons to highlight either Contrast or Auto Shutdown, and the **◀** or **▶** button to adjust.

The Contrast can be adjusted for better visibility depending on the ambient lighting conditions. Press the **◀** or **▶** button to increase or decrease the contrast from 0 to 20 (0 is lightest, 20 is darkest).

The display can be set to automatically turn off in order to conserve the battery life. Auto Shutdown will only occur after the preset time has elapsed without any button presses. Press the **◀** or **▶** button to scroll through the Auto Shutdown options (15 minutes, 60 minutes, Off).

The percent of full battery power is also shown in this menu.

Press the **Ⓚ** button to return to the Main Setup Menu.

Date & Time - The date and time, as well as date and time formats, can be adjusted.

The Time Formats available are: 12 hour and 24 hour. The Date formats available are day/month/year and month/day/year. (See page 5 for instructions on how to set the date and time.) Press the **Ⓚ** button to return to the Main Setup Menu.

Language - Displayed text can be set in one of three languages: English, French or Spanish. To choose a language, use the **▲** and **▼** buttons to highlight the desired language. Press the **■** button to select the language and return to the Main Setup Menu. Otherwise, press the **Ⓚ** button to return to the Main Setup Menu without changing languages.

Restore - Factory default menu settings can be restored. Press the **◀** or **▶** button on either Metric or Imperial to restore the factory settings. (See page 12 for a list of the Factory Default Settings.) Press the **Ⓚ** to return to the Main Setup Menu.

Baro Cal - Please contact NK for information about recalibrating the barometric pressure sensor.

Humidity Cal - Please contact NK for information about recalibrating the humidity sensor.

11

Graph Scale - These settings control the chart limits of your meter. Depending on the conditions, the lower and upper limits of the chart scale may need to be adjusted in order to get the best view of the data. Highlight the desired measurement by pressing the **▲** or **▼** button. Select the highlighted measurement by pressing the **■** button. Press the **◀** or **▶** button to increase or decrease the value of the limits. Press the **▲** or **▼** button to change between the upper and lower limits. Press the **Ⓚ** button to exit and return to the measurement selection screen. Press the **Ⓚ** button to return to the Main Setup Menu.

Units - The units of measure can be adjusted to best suit the application. The following units are available:

Wind Speed	Temperature, Dewpoint, Wet Bulb Temp, Wind Chill & Heat Index	Pressure	Altitude, Density Alt.
m/s	°C Celsius	inHg	m meters
km/h	°F Fahrenheit	hPa	ft feet
kt		inches mercury	
mph		hecto pascals	
ft/m		psi	
Bft		pound per square inch	
		mb	
		millibar	

Highlight the desired measurement by pressing the **▲** or **▼** button. Press the **◀** or **▶** button to scroll through the available units. Press the **Ⓚ** button to return to the Main Setup Menu.

User Screens - The three User Screens can be reconfigured to display the most appropriate information for the application. Only current measurements can be selected for the User Screens - Min/Max/Avg and Charts are not available.

Highlight the desired User Screen by pressing the **▲** or **▼** button. Press the **■** button to select the highlighted User Screen. Press the **▲** and **▼** buttons to change lines, and the **◀** or **▶** button to scroll through the available measurements for each highlighted line. Press the **Ⓚ** button to return to the User Screen Setup Menu. Repeat above process for the other User Screens or press the **Ⓚ** button to return to the Main Setup Menu.

10

Glossary

The below definitions have been greatly simplified in order to keep this section brief. We strongly recommend that anyone who wishes to make use of these measurements refer to one of the many excellent weather references available for a more in-depth definition. On the internet, visit www.usatoday.com or www.noaa.gov. Or, locate the USA Today publication, *The Weather Book*. Please note that any words in a definition printed in *italics* are themselves defined in this glossary.

Altitude: The distance above sea level. The Kestrel 4000 calculates altitude based on the measured *station pressure* and an assumed or known *barometric pressure*.

Barometric Pressure: The air pressure of your location reduced to sea level. Pressure will change as weather systems move into your location. Falling pressure indicates the arrival of a low pressure system and expected precipitation or storm conditions. Steady or rising pressure indicates clear weather.

Density Altitude: The *altitude* at which you would be, given the current air density. Often used by pilots in order to determine how an aircraft will perform. Also of interest to individual who tune high performance internal combustion engines, such as race care engines.

Dewpoint: The *temperature* to which air must be cooled in order for condensation to occur. The difference between *dewpoint* and *temperature* is referred to as the "temperature/dew point spread". A low dewpoint spread indicates high *relative humidity*, while a large dewpoint spread indicates dry conditions.

12

Heat Index: A practical measure of how hot the current combination of *relative humidity* and *temperature* feels to a human body. Higher *relative humidity* makes it seem hotter because our ability to cool ourselves by evaporating perspiration is reduced.

Relative Humidity: The amount of water vapor actually in the air divided by the maximum amount of water vapor the air could hold at that *temperature*, expressed as a percentage.

Station Pressure: The *air pressure* of your location, NOT reduced to the sea level equivalent.

Temperature: The ambient air temperature.

Wet Bulb Temperature: The lowest *temperature* to which a thermometer can be cooled by evaporating water into the air at constant pressure. This measurement is a holdover from the use of an instrument called a sling psychrometer. To measure wet bulb temperature with a sling psychrometer, a thermometer with a wet cloth covering over the bulb is spun rapidly through the air. If the relative humidity is high, there will be little evaporative cooling and the wet bulb temperature will be quite close to the ambient temperature. Some exercise physiology guides use *wet bulb temperature*, rather than *heat index*, as a measure of the safety of exercise in hot and humid conditions.

Wind Chill: The cooling effect of combining wind and temperature. The wind chill gives a more accurate reading of how cold it really feels to the human body.

Default Settings

	METRIC	IMPERIAL
Automatic Data Store	On	On
Data Store Rate	1 hour	1 hour
Data Overwrite	On	On
Manual Data Store	On	On
Wind Functions	m/s	mph
Temperature Functions	°C	°F
Barometric Pressure	hPa	inHg
Altitude Functions	m	ft
User Screen 1	wind speed, temperature, humidity	
User Screen 2	humidity, dewpoint, wet bulb	
User Screen 3	pressure, altitude, density altitdue	
Display Contrast	10	10
Automatic Shutdown	15 minutes	15 minutes
Time Format	24 hour	12 hour
Date Format	day/month/year	month/day/year
Language	English	English

Specifications

ACCURACY (Within OPERATIONAL RANGE stated below)

Wind Speed	±3% of reading	
Temperature	±1°C	
Wind Chill	±2°C	
Wet Bulb Temp	±2°C	
Dewpoint	±3°C (above 20% RH)	
Heat Index	±3°C	
Relative Humidity	±3%	
Pressure	±3hPa	
Altitude	±30m (at standard atmospheric conditions)	
Altitude Resolution	1m	
Density Altitude	±75m	

UNITS AND OPERATIONAL RANGE

Units	Low End	High End
Knots	0.6	78
Meters per Second	0.3	40
Kilometers per Hour	1.0	144
Miles per Hour	0.7	89
Feet per Minute	59	7877
Beaufort Force	1	16
Celsius	-29	70
Fahrenheit	-20	158
Percent Humidity	5	95
Meters	-500	9000
Feet	-1500	30000
Hectopascal (or mbar)	870.0	1080.0
Inches Mercury	25.70	31.90

RESPONSE TIME

Wind Speed	1 Second
Temperature, Relative Humidity, Wind Chill, Heat Index, Dewpoint	<1 Minute

DISPLAY

Update	1 second
Temperature Range	Normal operation from -20°C to 60°C [-4°F to 140°F]. Below -20°C [-4°F], accurate readings may be taken by keeping the unit warmer than -20°C [-4°F] and exposing it for the minimum time necessary to take a reading (less than one minute).
Storage Temperature	-30°C to 60°C [-22°F to 140°F].

PHYSICAL

Battery	Two AAA alkaline batteries (included).
Impeller	25 mm. [1 in.] diameter, sapphire bearings, light weight. User-replaceable impeller/housing assembly.
Temperature Sensor	Hermetically sealed precision thermistor.
Humidity Sensor	Capacitive sensor.
Pressure Sensor	Monolithic Silicon Piezoresistive sensor.
Dimensions	12.7 x 4.5 x 2.8 cm. [5 x 1.8 x 1.1 in.]
Weight	102 g. [3.6 oz.]

For more information or more detailed specifications, please visit www.nkhome.com.

NK

Nielsen-Kellerman
610.447.1555
www.nkhome.com
info@nkhome.com

Instruction Manual for Kestrel 4000 versions: 1.04 EFS 1A, 1.05 EFS 1A