

CC11412102+02A 21B

326-1010-90


APPLICATION

NEXT ASS'Y	USED ON	VAR

REVISIONS

REV	DESCRIPTION	ECN	DATE	APP'D

TOP VIEW OF
CONNECTOR

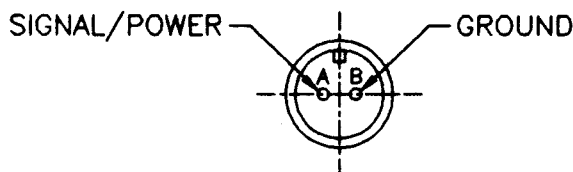


ELECTRICAL CONNECTOR
5/8-24 UNF-2A
2 PIN 10SL (MIL-C-5015)


PROTECTIVE/THERMAL
JACKET
MODEL 085A31
(SUPPLIED)

△ 1.188 (30.17) HEX
Ø 1.31 (Ø 33.27)
ACROSS CORNERS

1/4-28 UNF-2B
X .23 (5.8) T

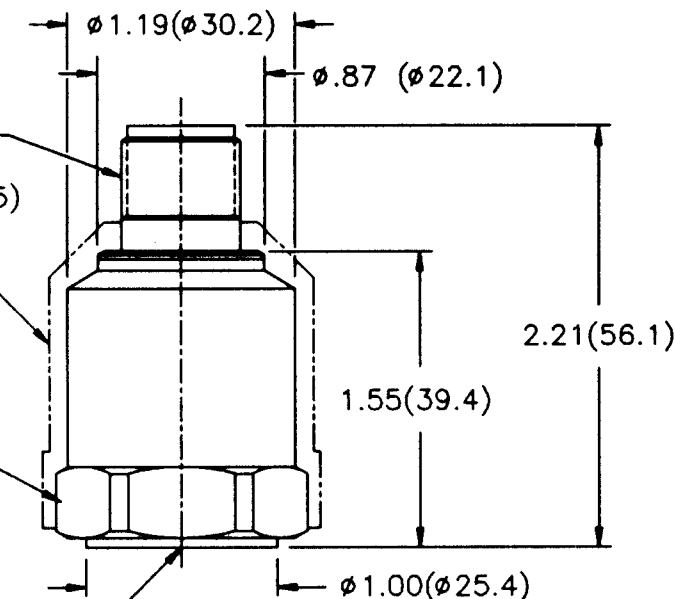

MODEL 081B20
MOUNTING STUD
1/4-28 UNF-2A
TYPICAL EACH END
(SUPPLIED)

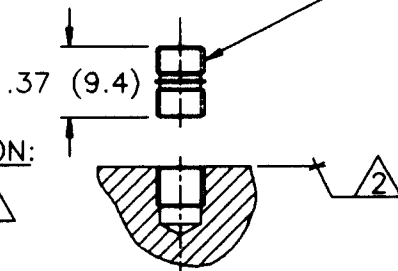

MOUNTING HOLE PREPARATION:

DRILL #3 Ø .213 (Ø 5.41) △ 1

X .300 (7.62) T

TAP 1/4-28 UNF-2B

X .200 (5.08) T

MINIMUM PERFECT THREAD

△ 3 RECOMMENDED MOUNTING TORQUE ON 1.188 (30.17) HEX 2-5 FOOT POUNDS
(2-7 NEWTON METERS).

△ 2 MOUNTING SURFACE SHOULD BE FLAT TO WITHIN .001 (.03) TIR OVER Ø .890 (Ø 22.61)
WITH A MINIMUM 63/ (1.6/) FINISH FOR BEST RESULTS.

△ 1 DRILL PERPENDICULAR TO MOUNTING SURFACE TO WITHIN ± 1°.

UNLESS SPECIFIED TOLERANCES

DIMENSIONS IN INCHES

DECIMALS XX ± .01

XXX ± .005

ANGLES ± 2 DEGREES

DIMENSIONS IN MILLIMETERS

(IN PARENTHESIS)

DECIMALS X ± 0.3

XX ± 0.13

ANGLES ± 2 DEGREES

FILLETS AND RADII .003 - .005 (0.07 - 0.13)

DRAWN	SDH	1/11/93	MFG	RTA	1/13/93
CHK'D	DM	1/13/93	ENGR	PL	1/13/93
APP'D	KE	1/13/93		D. LAU	1/18/93
TITLE	INSTALLATION DRAWING				

MODEL 326A, A02, A03
ACCELEROMETER

PCB

PIEZOTRONICS, INC.
3425 WALDEN AVE. DEPEW, NEW YORK 14043
PHONE: (716) 884-0001

CODE
IDENT. NO.
52681

DWG. NO.

326-1010-90

SCALE: FULL

SHEET 1 OF 1