



# CERTIFICATE OF CALIBRATION

## LONG FORM

MODEL NO. MR07-1500  
SERIAL NO: 4345572  
DESCRIPTION: FORCE SENSOR  
CAPACITY: 1500 LBF


TEMPERATURE (°F): 69.0 °F  
RELATIVE HUMIDITY (%): 42%  
TOLERANCE (±%FS): 0.15  
RESOLUTION: 1

READING NUMBER	MASTER READING	TENSION	ERROR %FS	COMPRESSION	ERROR %FS
1	150	149	-0.07	149	-0.07
2	300	299	-0.07	299	-0.07
3	450	449	-0.07	450	0.00
4	600	599	-0.07	601	0.07
5	750	749	-0.07	751	0.07
6	900	899	-0.07	901	0.07
7	1,050	1,049	-0.07	1,052	0.13
8	1,200	1,199	-0.07	1,202	0.13
9	1,350	1,349	-0.07	1,352	0.13
10	1,500	1,499	-0.07	1,502	0.13

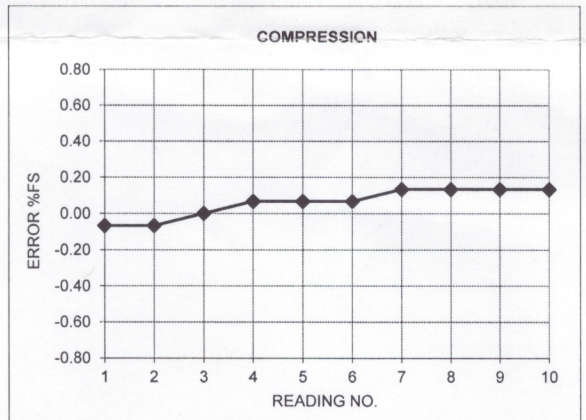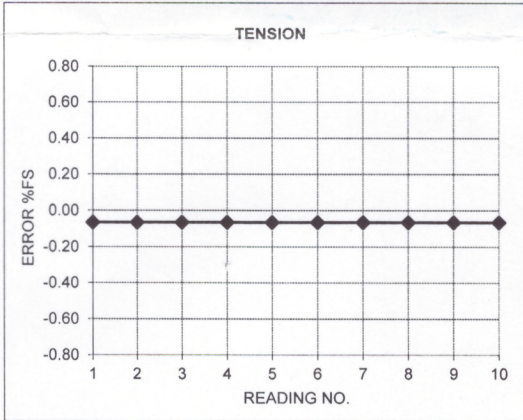

We hereby certify that the above instrument was calibrated according to procedures traceable to the National Institute of Standards & Technology (NIST). One or more of the below listed NIST traceability numbers apply:

30110-D16

By: 

Date: 6/23/23